

Northwind Marine — Owner's Manual (Placeholder)

This is a placeholder owner's manual for Northwind Marine vessels, generated for the Marine Demo Portal demo data set. Real manuals would supersede this document.

Safety

Always wear a USCG-approved personal flotation device. Keep a fire extinguisher within reach. Maintain a watchful lookout at all times.

Operation

Pre-start checks: fuel, oil, battery, bilge, navigation lights. Trim drive to neutral before starting. Idle engine for 30 seconds before applying throttle.

Maintenance

Oil and filter every 100 hours or annually. Lower-unit oil annually. Inspect anodes every 6 months. Flush engine after saltwater operation.

Storage

Stabilize fuel, drain water systems, fog cylinders, charge battery and disconnect, cover cockpit.

Warranty

Standard 5-year limited hull warranty. 3-year drivetrain warranty (engine warranty per engine manufacturer). See registration card for terms.